


GRID WALL BASEBOARD EXAMPLES

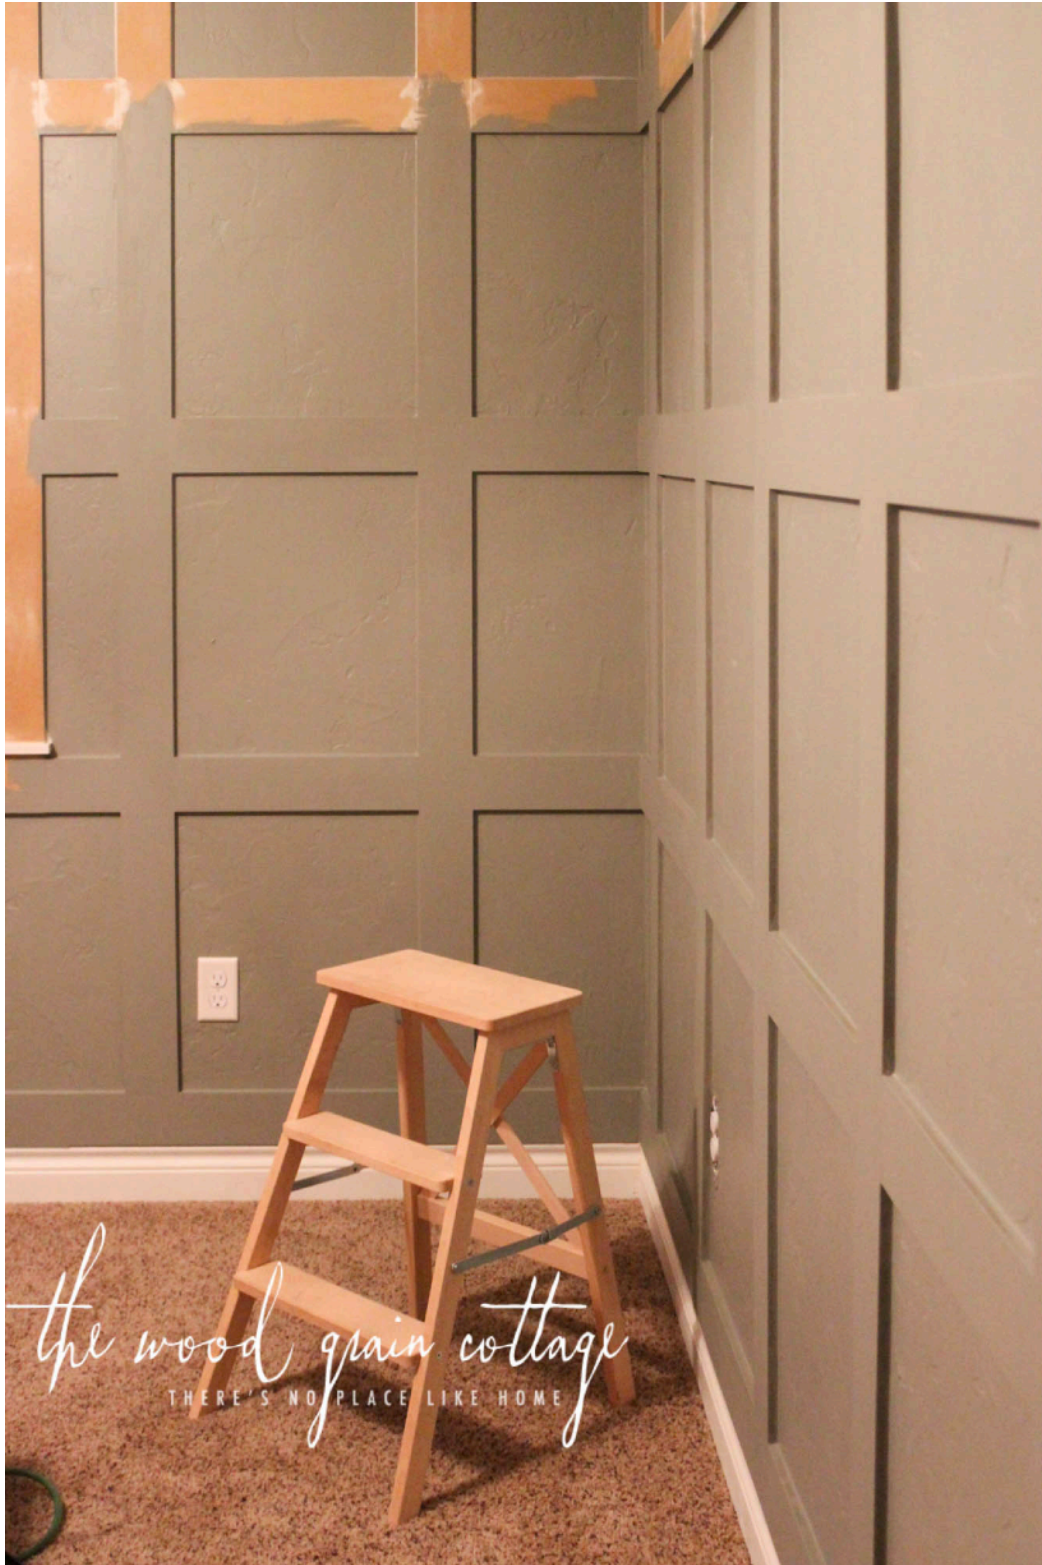

Example 1: Here is an example of placing the bottom horizontal grid just above the baseboard. In this case, they used a 1/2" MDF piece. Using a 3/4" thick piece for the bottom would stick out over the baseboard a little too much. So, for best results, we recommend using thinner wood/MDF pieces for your vertical and horizontal stiles.



Example 2: Here's an example where they used the baseboard as the bottom horizontal grid piece. In this case, we recommend either A) using thinner horizontal and vertical pieces (like 1/2"), or B) cutting the vertical pieces at an angle where they meet the baseboard for a cleaner look.



Here's a pic of both options side by side. In this case, they chose to go with the thinner wood rather than cut at an angle.



Example 3: One last option, is to add another piece of decorative trim at the bottom to create a transition between your baseboard and a thicker horizontal bottom grid. See pic below.



Here's the same concept, but with a smaller transition piece. You can install this transition piece right on top of the baseboard, as well.



Hopefully that gives you a few good options to work from. Good luck on your project!

-Melissa @ Welsh Design Studio